

Vox 155

Bluetooth Headset

TLL511451

-  User manual
-  Manual de utilizare
-  Manual del usuario
-  Manuel d'utilisation
-  Manuale d'uso
-  Benutzerhandbuch




INTO YOUR FUTURE

Thank you for choosing Tellur products!

To ensure an optimum performance and safety, please read this user manual carefully before using the product. Keep this user manual safe for future references.

Product diagram

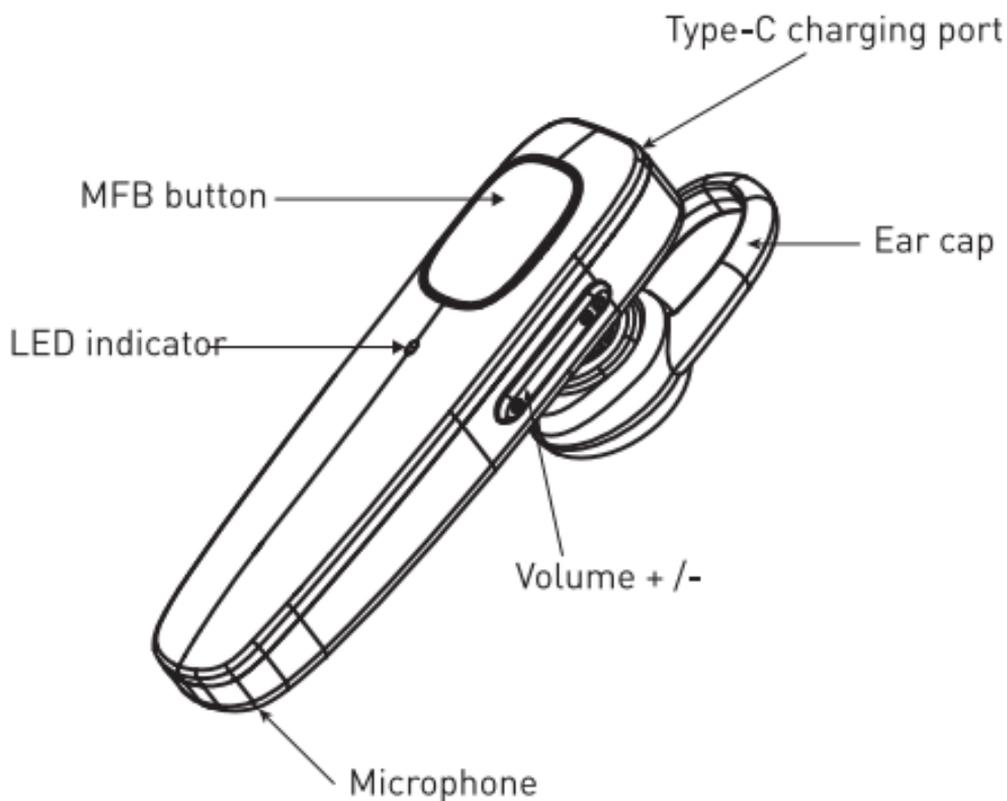

Technical specifications

Bluetooth version: v5.0

Wireless range: Up to 10 m

Frequency: 2.4GHz, Class 2

Supported profiles: A2DP, AVRCP, HFP

Multipoint technology: Pair and maintain connections with two phones and answer calls from either phone

Microphone frequency range: 100HZ-10Khz

Microphone sensitivity: -44dBm±2dB

Speaker: 10.45mm

Speaker sensitivity: 113±3dB at 1 kHz

Speaker impedance: 16±10%Ω

Speaker frequency range: 50HZ-10KHZ

Speaker rated power: 5mW

Speaker max power: 10mW

Talk time: Up to 9 hours

Standby time: Up to 15 days

Charge time: Approximately 2 hours

Charge connector: USB-C

Features: Two microphones for noise cancellation, iOS battery state monitor, Redial last number*, Voice dialing (activate Siri/Google Assistant)*, Voice control (activate Siri/Google Assistant)*

*Device dependent"

Bluetooth pairing name: Tellur Vox 155

Product dimensions: 58.2 x 14.4 x 20.5mm

Product weight: 9g

Package includes: 1 x Vox 155 Bluetooth headset, 1 x USB-A to USB-C cable, 1 x earhook, 3 x ear tips: S, M, L, 1 x Manual

Operating instructions

Charging

Before the first use, it is recommended to recharge the battery of the headphone completely.

Connect the Type-C cable to the Type-C charging port, the white LED indicator remains on for the entire duration of charging and turns off when the headset is fully charged.

- If the recharge does not turn on, disconnect, and reconnect the charger. A full charge cycle takes up to 2 hours. Unplug the headset and charger from the power supply source.
- When the battery level is low, an alert tone "Low battery, please charge" is played every 5 minutes, and the white LED indicator flashes 3 times every 20 seconds.
- If the battery level is less than 20% the user will hear a voice warning about the low battery and can continue to use the headset, still about 20min.

The fully recharged battery offers an autonomy of up to 9 hours of speech and up to 15 days in standby. The actual speech autonomy varies depending on phones, settings, usage, environment, and other variables.

On/off

- Press and hold the MFB button for 3 seconds to turn on the headset, at which point the headset will issue a "start" voice warning, followed by another "pairing" voice warning.
- After the pairing state is initiated, the white LED light will continue to flash until the pairing is successful. If no connection is found, for 3 minutes, the headset will close automatically.
- When the headset is turned on, if you press and hold the MFB button for 5 seconds, then the headset will turn off, accompanied by a "power off" voice warning.

Pairing

Turn on the Bluetooth function of the phone and look for the "Tellur Vox 155" headset to connect.

- Once the connection to the phone has been successfully made, a "connected" voice warning will be heard.
- The "disconnected" voice warning will be heard when Bluetooth is paused/interrupted, and the device enters the pairing state.

Multipoint connection

The headset can connect to 2 phones at the same time.

- After pairing a phone with a headset, turn off the headset and Bluetooth connection of the connected phone and repeat the pairing process to connect a secondary phone.
- Turn the headset off and on again and restart the Bluetooth connection of the first phone to complete the pairing on both phones.

The headset automatically pairs with the latest paired phone(s) the next time you turn it on.

Delete the pairing history

When the headset is charging, press and hold the MFB button for about 5 seconds until the white LED light flashes 3 times to erase the pairing records.

Control music and calls

Answer a call: In the event of an incoming call, click on the MFB button once to receive the call, while a prompt electronic tone will be heard.

End a call: During a call, click the MFB button to end the call, while an electronic tone prompt will be heard.

Reject a Call: When there is a call received, press, and hold

the MFB button to reject the call, while an electronic tone prompt will be heard.

Redial the last number: In standby mode, click the MFB button to redial the last called number. One more click, again on MFB, will undo the redial.

Volume Control: During a call, briefly press Volume+ to increase the volume; briefly press Volume - to decrease the volume.

- Volume - : Click on "Volume" - "once, the volume will decrease by one level. A "beep" sound will be heard when reduced to a minimum.
- Volume +: Click on Volume "+" once, the volume will increase by one level. A "beep" sound will be heard when it reaches its maximum.

Next Song: Press and hold the Volume + button for 1 second.

Previous Song: Press and hold the Volume - button for 1 second.

Play/pause music: Press the MFB button to pause the music or repeat the same operation to play the music again.

Pending calls

- End the current call and answer the incoming call on the secondary phone: press the Multifunction (MFB) button.
- Put the current call (channel A) on hold and answer the incoming call (channel B) on the secondary phone: press the Multifunction button twice. Double-click the MFB button again to switch to channel A. Repeat the operation to switch between the two channels of A/B. During a three-way call, click the MFB button once to close the current call and resume another call.

Loss of connection: When you exceed the allowed connection distance, you will hear a "disconnected" voice notification. The white LED indicator flashes quickly. The headset automatically enters the pairing state after about 3 minutes.

Turn voice control on/off: When your headphones play music/standby, press, and hold the MFB button to turn on the voice assistant and press the MFB button again to cancel the voice assistant. (To use this feature, your mobile phone should support voice control.)

Reset to factory configurations:

- When charging the headset, long press MFB around 5 seconds, the white LED light will blink three times.

Safety information

- This product contains a rechargeable Li-ion battery and cannot be replaced.
- To prevent the risk of hearing damage, do not listen at high levels of volume, for long periods of time.
- Don't try to detach the battery from the headset. Otherwise, the headset may be damaged. If you do not use it for a longer period, keep it in a dry and well-ventilated place and recharge it once every two months.
- Before using any charger to power the headset, make sure that the charger specifications meet the requirements of the headset.
- Keep your headset away from bank cards or other magnetic storage devices.

Troubleshooting

Description of the problem	Cause	Solution
Power on function failed	<p>The battery has a low level.</p> <p>Pressing too short of the MFB button.</p>	<p>Recharge the battery.</p> <p>Press MFB longer(3 seconds).</p>
Charging function failed	<p>The charging cable is not connected correctly.</p>	<p>Disconnect and reconnect the charging cable.</p>
	<p>The charging cable is not appropriate.</p>	<p>The charger specifications must comply with the requirements of the headset.</p>
Power off function failed	<p>Pressing too short of the MFB button.</p>	<p>Press and hold the MFB button for 5 seconds.</p>
The headset could not be found or pairing failed	<p>Headphones does not enter into pairing mode.</p>	<p>Turn on the headphones to enter the pairing mode.</p>
	<p>Your phone's Bluetooth feature is not turned on.</p>	<p>Turn the phone off and on.</p>
	<p>The distance between the headset and the phone is outside the area of action (up to 10m).</p>	<p>Maintain the appropriate distance necessary to make the connection.</p>

Disposal and recycling information



The crossed-out wheeled-bin symbol on your product, battery, literature or packaging reminds you that all electronic products and batteries must be taken to separate waste collection points at the end of their working lives; they must not be disposed of in the normal waste stream with household garbage.

It is the responsibility of the user to dispose of the equipment using a designated collection point or service for separate recycling of waste electrical and electronic equipment (WEEE) and batteries according to local laws.

Proper collection and recycling of your equipment helps ensure EEE waste is recycled in a manner that conserves valuable materials and protects human health and the environment, improper handling, accidental breakage, damage, and/or improper recycling at the end of its life may be harmful for health and environment.

Corded and Wireless – Europe

Please read through all applicable sections.

For your protection and comfort, ABN Systems International S.A. has implemented protective measures in this product designed to maintain safe volume levels and ensure that the product operates in compliance with government safety standards.

AUDIO PRODUCT WARNING!

PERMANENT HEARING LOSS MAY RESULT FROM LONG-TERM EXPOSURE TO SOUNDS AT HIGH VOLUMES. USE AS LOW A VOLUME AS POSSIBLE.

Avoid prolonged use of headsets at excessive sound pressure levels.

You can reduce the risk of hearing damage by following these safety guidelines:

1. Prior to using this product follow these steps

- Before using the product, turn the volume control to its lowest level,
- Put the headset on, if applicable
- Slowly adjust the volume control to a comfortable level.

2. During the use of this product

- Keep the volume at the lowest level possible
- If increased volume is necessary, adjust the volume control slowly
- If you experience discomfort or ringing in your ears, immediately discontinue using the product.

With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

GENERAL SAFETY INFORMATION!

- If you have a pacemaker or other electrical medical devices, consult your physician before using this product.
- This package contains small parts that may be hazardous to children. Always store the product out of reach from children. The bags themselves or the many small parts they contain may cause choking if ingested.
- Never try to dismantle the product yourself, or push objects of any kind into the product, as this may cause short circuits which could result in a fire or electric shock.
- None of the components can be replaced or repaired by users. Only authorized dealers or service centers may open the product. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, contact your dealer.
- Avoid exposing your product to rain or other liquids.
- Keep all products, cords, and cables away from operating machinery.
- Observe all signs and instructions that require an electrical device or RF radio product to be switched off in designated areas such as hospitals or aircrafts.
- If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.
- Dispose of the product according to local standards and regulations (see www.tellur.com/weee).

Remember: Always drive safely, avoid distractions and follow local laws!

The use of a speaker while operating a motor vehicle may be regulated by local laws. Using a headset while operating a motor vehicle, motorcycle, watercraft or bicycle may be dangerous, and is illegal in some jurisdictions, just as use of this headset with both ears covered while driving is not permitted in certain jurisdictions. Check with your local authorities.

BUILT-IN BATTERY CARE: Please observe the following if the product contains a battery.

- Your product is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles.
- The battery can be charged and discharged hundreds of times, but will eventually wear out. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime.
- If left unused, a fully charged battery will lose its charge over time.
- Leaving the product in hot or cold places will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A product with a hot or cold battery may not work temporarily, even when the battery is fully charged.

Battery warning!

- "Caution" – The battery used in this product may present a risk of fire or chemical burn if mistreated. Batteries may explode if damaged.
- Only recharge your battery with the provided approved chargers designated for this product.
- Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste or in a fire as they may explode.
- Unless otherwise specified in the user manual or quick start guide the battery in your product can not be removed or replaced by the user. Any attempt to do so is risky and may result in damage of the product.

For information on batteries please go to:

www.tellur.com/batteries.

CHARGER CARE: Please observe the following if the product is supplied with a charger

- Do not attempt to charge/power your product with anything other than the charger provided. The use of any other types

may damage or destroy the product and could be dangerous. Use of other chargers may invalidate any approval or warranty. For availability of approved enhancements, please check with your dealer.

- Charge/power the product according to the instructions supplied with the product.

Important: Please refer to the user manual for a description of the charging status indicator lights. Some products cannot be used while charging.

Charger warning!

- Do not use a wall charger with more than 5V and 2A output.
- When you disconnect the power cord or any enhancement, grasp and pull the plug, not the cord. Never use a charger that is damaged.
- Do not attempt to disassemble the charger as it may expose you to dangerous electric shock.

MAINTENANCE

- Unplug the product or charger before cleaning
- Clean the product by wiping with a dry or slightly damp cloth. The cord and charger may only be dry-dusted.

Declaration of conformity

We, ABN SYSTEMS INTERNATIONAL S.A, Bucharest, Sector 1, Marinariilor street, nr. 31, declare on own responsibility that the product below:

Product description	Brand	Product code
Bluetooth Headset Vox 155, Black	Tellur	TLL511451

Does not endanger life, health, work safety, does not have a negative impact on the environment and corresponds to the standards stated in the manufacturer's declaration of conformity.

The product is compliant with the following standards and / or other normative documents:

RED – 2014/53/EU

Applied standards:

EN 301 489 -1 V2.2.3 (2019-11)

EN 301 489-17 V3.2.4 (2020-09)

EN 300 328 V.2.2.2 (2019-17)

EN 50332-2: 2013

EN 62479:2010

EN 50663:2017

EN IEC 62368 -1:2020+A11:2020

ROHS - 2011/65/EU

The product bears CE mark, applied in 2023.

Name: George Barbu
Function: General manager

Place and date: Bucharest, 12.03.2023
Signed:

