

BUDDY Bluetooth Headphones TLL 511501-TLL 51511

- Installation guide and operation instructions
- Ghid de instalare și instrucțiuni de funcționare
- Guía de instalación e instrucciones de funcionamiento
- () Guide d'installation et mode d'emploi
- () Guida all'installazione e istruzioni per l'uso
- Einbauanleitung und Bedienungsanleitung



Thank you for choosing Tellur products!

To ensure an optimum performance and safety, please read this user manual carefully before using the product. Keep this user manual safe for future references.

1. GENERAL SAFETY INFORMATIONS:

1.1 WARNINGS

- Please, keep the headset away from water or other liquids.
- If you need to clean the headset, please, make sure it is not connected to the power supply.
- Avoid using next to sources of increased heat or humidity.
- Unplug the headset from the power source when is not charging.

1.2 ATTENTION

- Don't use the product if it is damaged in any way, shape, or form.
- Don't attempt to repair, disassemble, or modify this product.
- Don't place the product near any heat source.

1.3 NOTES

- Do not use it while operating a motorized vehicle. It may create a traffic hazard and is dangerous.
- If you experience a ringing in your ears, reduce volume or discontinue use.
- Do not use your headphones at a high volume for a long time. Hearing experts advise against continuous extended play.

2. PRODUCT OVERVIEW 2.1 PRODUCT DIAGRAM

- 1. Volume up
- 2. Power key
- 3. Volume down
- 4. Mode key
- 5. USB-C charging port
- 6. AUX 3.5mm jack
- 7. microSD card



LED indicator light Status:

Charge Status	LED indicator light stays red when charging. When fully charged, LED indicator light stays blue.
Power on	LED indicator light turns blue.
Power off	LED indicator light turns off.
Pairing Status	LED indicator light rapidly alternating flashes blue and red.
Connected status	LED indicator light stays blue.
Using Status	Bluetooth Mode: LED indicator light flashes blue every 5 seconds.
	TF Mode:LED indicator light flashes red every 5 seconds.
	FM Mode: LED indicator flashes red every 5 seconds.

2.2 KEYS FUNCTIONS

1 Power key

- Long press the button for three seconds to power on.
- Long press the button for three seconds again to power off.
- Find the Bluetooth name Tellur Buddy in the search list to connect it to your mobile or other Bluetooth devices.
- During the music playing, click power button once to play/pause music. In wireless mode when receiving a call: short press to answer/end the call, long press to refuse incoming call.
- Double press to call last number you dial.
- 2. + key:
- Short press volume +
- Long press: next song
- 3. key:
- Short press volume -
- Long press: previous song
- 4. M key
- Short press changes the headphone from Bluetooth mode to radio mode.
- Long press deactivate/reactivate Kids mode (limited volume)
- **5.** You can also insert in 3.5mm cable and connect your mobile with the headphone and listen to the music from your mobile or computer

2.3 IN THE BOX

- 1. 1 x Headset Over-Ear Bluetooth
- 2. 1 x Type C cable,
- 3. 1 x Audio cable
- 4. 1 x User Manual

2.4 PRODUCT FUNCTION

Bluetooth Mode:

- For the first time pairing: Long press to start up the Bluetooth headset, a tone "Power On" will be heard, it will enter into Bluetooth mode automatically, then a tone "Pairing" will be heard, LED indicator light alternating flashes blue and red. Please open the smart device's Bluetooth searching function and select the device "Tellur-Buddy", no password is required, after successful pairing, a tone "Connected" will be heard, LED indicator light turns to blue.
- Re-pairing: Turn off the attached smart device's Bluetooth function, a tone "Disconnected" will be heard, the last connected device cannot be searched within 3 seconds, the headset will enter into re-pairing mode automatically. Open another smart device's Bluetooth searching function and select the device "Tellur Buddy", no password is required, after successful pairing, a tone "Connected" will be heard, LED indicator light turns to blue.
- Follow-up pairing: automatically pair the last connected device in 3 seconds after power on.

AUX-in Mode

• When the headset is on and insert the Aux cable into the 3.5mm audio port, the headset will turn off and switch to Aux-in playing.

TF Mode

- When the slot is empty and then insert the TF Card, a tone "MicroSD card playing" will be heard and then it will switch to TF card play mode automatically.
- Short press "M" to change the mode when the TF card has been inserted.

3. TECHNICAL SPECIFICATIONS

Bluetooth version:	v5.3
Wireless range:	10 m
Microphone:	Yes
•	
Frequency:	2.4GHz, Class 2
Supported profiles:	$a2dp\avctp\avdtp\avrcp\hfp\spp\smp\att\gap\gatt\rfcomm\\ \sdp\l2cap\ profile$
Driver unit:	40mm
Frequency response:	20-20kHz
Sensitivities:	85db -Kids Mode 102db-Normal Mode
Impedance:	320±15%
Music play time:	up to 15 hours
Standby time:	up tp 16 hours
Charge time:	up to 2 hours
Volume control:	Yes
Cord length:	120cm
Input:	Type C, 5V
Bluetooth pairing name:	Tellur Buddy
Color:	Blue
Product dimensions:	18 x 16 x 3.5cm
Product weight:	154g
Package includes:	1 x Bluetooth Over-Ear Headphones 1 x Type C cable 1 x Audio cable 1 x User Manual

Corded and Wireless - Europe

Please read through all applicable sections.

For your protection and comfort, ABN Systems International S.A. has implemented protective measures in this product designed to maintain safe volume levels and ensure that the product operates in compliance with government safety standards.

AUDIO PRODUCT WARNING!

PERMANENT HEARING LOSS MAY RESULT FROM LONG-TERM EXPOSURE TO SOUNDS AT HIGH VOLUMES. USE AS LOW A VOLUME AS POSSIBLE.

Avoid prolonged use of headsets at excessive sound pressure levels.

You can reduce the risk of hearing damage by following these safety guidelines:

- 1. Prior to using this product follow these steps
- Before using the product, turn the volume control to its lowest level.
- Put the headset on, if applicable
- Slowly adjust the volume control to a comfortable level.
- 2. During the use of this product
- Keep the volume at the lowest level possible
- If increased volume is necessary, adjust the volume control slowly
- If you experience discomfort or ringing in your ears, immediately discontinue using the product.

With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

GENERAL SAFETY INFORMATION!

- If you have a pacemaker or other electrical medical devices, consult your physician before using this product.
- This package contains small parts that may be hazardous to children. Always store the product out of reach from children. The bags themselves or the many small parts they contain may cause choking if ingested.

- Never try to dismantle the product yourself, or push objects of any kind into the product, as this may cause short circuits which could result in a fire or electric shock.
- None of the components can be replaced or repaired by users. Only authorized dealers or service centers may open the product. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, contact your dealer.
- Avoid exposing your product to rain or other liquids.
- Keep all products, cords, and cables away from operating machinery.
- Observe all signs and instructions that require an electrical device or RF radio product to be switched off in designated areas such as hospitals or aircrafts.
- If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.
- Dispose of the product according to local standards and regulations (see www.tellur.com/weee).

Remember: Always drive safely, avoid distractions and follow local laws!

The use of a speaker while operating a motor vehicle may be regulated by local laws. Using a

headset while operating a motor vehicle, motorcycle, watercraft or bicycle may be dangerous, and is illegal in some jurisdictions, just as use of this headset with both ears covered while driving is not permitted in certain jurisdictions. Check with your local authorities.

BUILT-IN BATTERY CARE: Please observe the following if the product contains a battery.

- Your product is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles.
- The battery can be charged and discharged hundreds of times, but will eventually wear out. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime.
- If left unused, a fully charged battery will lose its charge over time.
- Leaving the product in hot or cold places will reduce the

battery between 15°C and 25°C (59°F and 77°F). A product with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery warning!

• "Caution" - The battery used in this product may present a risk of fire or chemical burn if mistreated. Batteries may explode if

capacity and lifetime of the battery. Always try to keep the

product.

damaged. • Only recharge your battery with the provided approved chargers designated for this product. • Dispose of batteries according to local regulations. Please recycle

when possible. Do not dispose as household waste or in a fire as

they may explode. • Unless otherwise specified in the user manual or quick start quide the battery in your product can not be removed or replaced by the user. Any attempt to do so is risky and may result in damage of the

For information on batteries please go to: www.tellur.com/batteries.

CHARGER CARE: Please observe the following if the product is supplied with a charger

• Do not attempt to charge/power your product with anything other than the charger provided. The use of any other types may damage or destroy the product and could be

dangerous. Use of other chargers may invalidate any approval or warranty. For availability of approved enhancements, please check with your dealer. • Charge/power the product according to the instructions supplied with the product. Important: Please refer to the user manual for a description of the

while charging. Charger warning!

charging status indicator lights. Some products cannot be used

• Do not use a wall charger with more than 5V and 2A output.

- When you disconnect the power cord or any enhancement, grasp and pull the plug, not the cord. Never use a charger that is
- damaged. • Do not attempt to disassemble the charger as it may expose you to dangerous electric shock.

MAINTENANCE

- Unplug the product or charger before cleaning
- Clean the product by wiping with a dry or slightly damp cloth. The cord and charger may only be dry-dusted.

Disposal and recycling information

X

The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electronic products and batteries must be taken to separate waste collection points at the end of their working lives; they must not be disposed of in the normal waste stream with household garbage.

It is the responsibility of the user to dispose of the equipment using a designated collection point or service for separate recycling of waste electrical and electronic equipment (WEEE) and batteries according to local laws.

Proper collection and recycling of your equipment helps ensure EEE waste is recycled in a manner that conserves valuable materials and protects human health and the environment, improper handling, accidental breakage, damage, and/or improper recycling at the end of its life may be harmful for health and environment.