



Vox 100

Bluetooth Headset

TLL511531

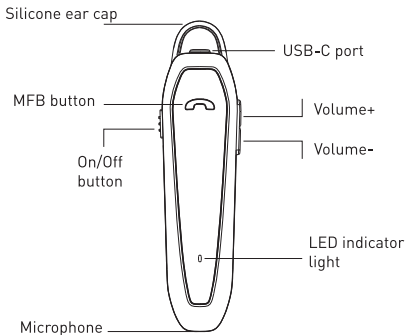
-  User manual
-  Manual de utilizare
-  Manual del usuario
-  Manuel d'utilisation
-  Manuale d'uso
-  Benutzerhandbuch

A stylized silhouette of a city skyline with various skyscrapers of different heights and shapes.

INTO YOUR FUTURE

Thank you for choosing Tellur products!

To ensure an optimum performance and safety, please read this user manual carefully before using the product. Keep this user manual safe for future references.

Product diagram

Technical specifications

Bluetooth version:	v5.3
Chipset:	BT8925B2
Wireless range:	Up to 10 m
Frequency:	2.4GHz, Class 2
Supported profiles:	A2DP, AVRCP, HFP
Multipoint technology:	Pair and maintain connections with two phones and answer calls from either phone
Microphone frequency range:	100HZ-16Khz
Microphone sensitivity:	-42dBm±3dB
Speaker:	10mm
Speaker sensitivity:	101±3dB at 1 kHz
Speaker impedance:	32±15%Ω
Speaker frequency range:	20HZ-20KHZ
Speaker rated power:	3mW
Speaker max power:	5mW
Talk time:	Up to 22 hours
Standby time:	Up to 50 days
Battery:	230mAh
Charge time:	Approximately 2 hours
Charge connector:	USB-C
Features:	SVE noise cancelling technology, iOS battery state monitor, Redial last number*, Voice dialing (activate Siri/Google Assistant)*, Voice control (activate Siri/Google Assistant)* *Device dependent
Bluetooth pairing name:	Tellur Vox 100
Product dimensions:	6.92 x 1.83cm x 2.95cm
Product weight:	12.3g
Operating temperature:	0°C to +40°C
Package includes:	1 x Vox 100 Bluetooth headset, 1 x USB-A to USB-C cable, 1 x plastic ear hook, 1 x TPU ear hook, 1 x ear tip: M, 1 x Manual

Headset charging

The headset has a rechargeable battery inside.

Before using the headset for the first time, we recommend that you use it until the battery is fully discharged.

To charge the headset please connect the USB cable to the USB-C charging port of the headset.

The indicator light will be red for the entire duration of charging and will turn blue when the headset is fully charged.

When the battery level is low, an alert tone "Low battery" is played every 60 seconds, and the red LED indicator flashes 2 times.

If the battery level is less than 15% the user will hear a voice warning about the low battery.

! Note: Please use the original special charging cable, charging voltage cannot be higher than 5V!

Enable Bluetooth headset

Power On: Press and hold the MFB button for 2 seconds to turn on the headset until the blue light flashes three times, at which point the headset will issue a "power on" voice notification.

Power Off: When the headset is turned on, if you press and hold the MFB button for 4 seconds, the headset will turn off and the red light will flash three times, accompanied by a "power off" voice notification.

In without any connection status, the red light will keep flashing and the headphone will shut down automatically within 5 minutes of standby, followed by a "power off" voice notification.

Pairing: in the off state, long press the MFB key for about 4 seconds to enter the pairing mode. Turn on the Bluetooth function of the phone and look for the "Tellur Vox 100" headset to connect.

The mobile phone can search for the pairing name, and the red and blue lights will flash alternately accompanied by a "pairing" voice notification. Once the connection to the phone has been successfully made, a "connected" voice notification will be heard.

When you turn on the headphones, it will connect back to the paired device automatically. The blue lights flash slowly, and a "connected" voice notification will be heard.

Answer/end a call: Click the multifunction button to answer an incoming call or end an ongoing call.

Reject incoming call: Long press the multifunction button for about 2 seconds.

Listen to music /pause: Click the multifunction button to pause playback.

Previous song: Long press the volume button+ about 2 seconds .

Next song: Long press the volume button - about 2 seconds.

Redial last call: Double click the multifunction button.

Volume Control: During a call, briefly press Volume+ to increase the volume; briefly press Volume - to decrease the volume.

- Volume - : Click on "Volume" - "once, the volume will decrease by one level. A "beep" sound will be heard when reduced to a minimum.

- Volume +: Click on Volume "+" once, the volume will increase by one level. Keep pressing the "volume +" button, a "maximum volume" will be heard.

Low power reminder: The red-light flashes twice to indicate that the battery is low, accompanied by a "Low battery" voice notification.

Loss of connection: When you exceed the allowed connection distance, you will hear a "disconnected" voice notification.

The blue light flashes slowly. The headset automatically enters the pairing state after about 5 minutes accompanied by a "connected" voice notification.

Turn voice control on/off: When your headphones play music/standby, press, and hold the MFB button (about 2 seconds) to turn on the voice assistant and press the MFB button again to cancel the voice assistant. (To use this feature, your mobile phone should support voice control.)

Reset to factory configurations: In pairing mode, press and hold the "Volume +" button until headset turns off after the red and blue lights are on for 1s.

Multipoint connection

The headset can connect to 2 phones at the same time.

- After pairing a phone with a headset, turn off the headset and Bluetooth connection of the connected phone and repeat the pairing process to connect a secondary phone.
- Turn the headset off and on again and restart the Bluetooth connection of the first phone to complete the pairing on both phones.

The headset automatically pairs with the latest paired phone(s) the next time you turn it on.

Pending calls

During a call (A), if there is another incoming call (B), please:

1. Click the MFB button to answer call (B) and keep current call (A), click again to switch between call (A) and call (B).
2. Double click the MFB button to hang up call (B).
3. Press and hold the MFB button for 2-3 seconds to reject call (B).

Disconnect the headset from the phone

Disconnect the headset from the phone (e.g. connect the phone to another Bluetooth device)

Please use either of the following methods:

- Turn off the Bluetooth headset.
- Disconnect the Bluetooth headset from the phone by using the phone's Bluetooth function.
- Move your BT headset 10 meters (30 feet) away from your phone.

Troubleshooting

Hear “Disconnected” voice notification

Because the protocol distance of Bluetooth is an open area, it can reach 10m under barrier-free conditions. The human body is also one of the biggest interference obstacles for Bluetooth headsets. We recommend that you wear your headset on the same side of your phone for a stable connection.

No sound from BT headset

- 1.Ensure that the BT headset is turned on and fully charged.
- 2.Ensure that the headset is connected to the mobile phone.
- 3.Make sure that the Bluetooth device of the mobile phone is enabled.
- 4.Make sure the distance between headset and mobile phone is kept within 10 meters and in open area with barrier-free condition. Any obstruction such as wall, electronics equipment between both devices will reduce the stability of Bluetooth connection.
- 5.If the previous steps fail to resolve the problem, try the following operations:
 - a.Re-charge the headset
 - b.Restart the phone.
 - c.Enable the Bluetooth function of the mobile phone and delete the previous pairing history!
 - d.Connect the Bluetooth phone with the mobile phone again!

Warning and Declaration

Corded and Wireless – Europe

Please read through all applicable sections.

For your protection and comfort, ABN Systems International S.A. has implemented protective measures in this product designed to maintain safe volume levels and ensure that the product operates in compliance with government safety standards.

AUDIO PRODUCT WARNING!

PERMANENT HEARING LOSS MAY RESULT FROM LONG-TERM EXPOSURE TO SOUNDS AT HIGH VOLUMES. USE AS LOW A VOLUME AS POSSIBLE.

Avoid prolonged use of headsets at excessive sound pressure levels.

You can reduce the risk of hearing damage by following these safety guidelines:

1. Prior to using this product follow these steps

- Before using the product, turn the volume control to its lowest level,
- Put the headset on, if applicable
- Slowly adjust the volume control to a comfortable level.

2. During the use of this product

- Keep the volume at the lowest level possible
- If increased volume is necessary, adjust the volume control slowly
- If you experience discomfort or ringing in your ears, immediately discontinue using the product.

With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

GENERAL SAFETY INFORMATION!

- If you have a pacemaker or other electrical medical devices, consult your physician before using this product.
- This package contains small parts that may be hazardous to children. Always store the product out of reach of children. The bags themselves or the many small parts they contain may cause choking if ingested.
- Never try to dismantle the product yourself, or push objects of any kind into the product, as this may cause short circuits which could result in a fire or electric shock.

- None of the components can be replaced or repaired by users. Only authorized dealers or service centers may open the product. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, contact your dealer.
- Avoid exposing your product to rain or other liquids.
- Keep all products, cords, and cables away from operating machinery.
- Observe all signs and instructions that require an electrical device or RF radio product to be switched off in designated areas such as hospitals or aircrafts.
- If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.
- Dispose of the product according to local standards and regulations
(see <http://www.tellur.com/weee>).

Remember: Always drive safely, avoid distractions, and follow local laws!

The use of a speaker while operating a motor vehicle may be regulated by local laws. Using a headset while operating a motor vehicle, motorcycle, watercraft, or bicycle may be dangerous, and is illegal in some jurisdictions, just as use of this headset with both ears covered while driving is not permitted in certain jurisdictions. Check with your local authorities.

BUILT-IN BATTERY CARE: Please observe the following if the product contains a battery.

- Your product is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles.
- The battery can be charged and discharged hundreds of times but will eventually wear out. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime.

- If left unused, a fully charged battery will lose its charge over time.
- Leaving the product in hot or cold places will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A product with a hot or cold battery may not work temporarily, even when the battery is fully charged.

Battery warning!

Caution – The battery used in this product may present a risk of fire or chemical burn if mistreated. Batteries may explode if damaged.

- Only recharge your battery with the provided approved chargers designated for this product.
- Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste or in a fire as they may explode.
- Unless otherwise specified in the user manual or quick start guide the battery in your product cannot be removed or replaced by the user. Any attempt to do so is risky and may result in damage of the product.

For information on batteries please go to <http://www.tellur.com/batteries>.

CHARGER CARE: Please observe the following if the product is supplied with a charger

- Do not attempt to charge/power your product with anything other than the charger provided. The use of any other types may damage or destroy the product and could be dangerous. Use of other chargers may invalidate any approval or warranty. For the availability of approved enhancements, please check with your dealer.
- Charge/power the product according to the instructions supplied with the product.

Important: Please refer to the user manual for a description of the charging status indicator lights. Some products

cannot be used while charging.

Charger warning!

- Do not use a wall charger with more than 5V and 2A output.
- When you disconnect the power cord or any enhancement, grasp and pull the plug, not the cord. Never use a charger that is damaged.
- Do not attempt to disassemble the charger as it may expose you to dangerous electric shock.

MAINTENANCE

- Unplug the product or charger before cleaning
- Clean the product by wiping with a dry or slightly damp cloth. The cord and charger may only be dry dusted.

Disposal and recycling information



The crossed-out wheeled-bin symbol on your product, battery, literature or packaging reminds you that all electronic products and batteries must be taken to separate waste collection points at the end of their working lives; they must not be disposed of in the normal waste stream with household garbage.

It is the responsibility of the user to dispose of the equipment using a designated collection point or service for separate recycling of waste electrical and electronic equipment (WEEE) and batteries according to local laws.

Proper collection and recycling of your equipment helps ensure EEE waste is recycled in a manner that conserves valuable materials and protects human health and the environment, improper handling, accidental breakage, damage, and/or improper recycling at the end of its life may be harmful for health and environment.