

Shade Bluetooth Over-ear Headphones, ANC

TLL511541-TLL511551-TLL511561- TLL511571

- **#** User manual
- Manual de utilizare
- Manual del usuario
- Manuel d'utilisation
- () Manuale d'uso
- Benutzerhandbuch






Thank you for choosing Tellur!

Please read this user manual carefully before using the product and keep it safe for future references.

Please note! Damages caused by misuse of the product will not be covered by the product's warranty.

Description of function port

- 1 Volume + (Next Track)
- ② MFB Pause/play music, Pick up/hang up, Power ON/OFF, Music/Gaming mode switch, Voice assistance
- (3) Volume (Previous Track)
- (4) ANC mode switch
- ⑤ USB-C charging port
- 6 3.5MM Jack

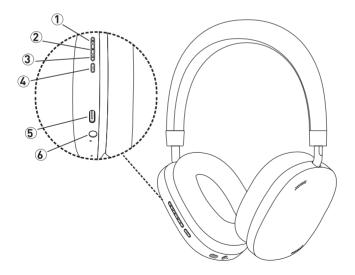

Technical specifications

Wireless range:	2.4GHz, Class 2
-	
	15m
Supported profiles:	A2DP, AVRCP, HSP, HFP
Multipoint technology:	Pair and maintain connections with two devices at
	the same time, remember up to 8 devices
Drivers size:	40mm
Ear cushions:	Leatherette
Speaker frequency range:	20Hz - 20KHz
Speaker impedance:	32Ω
Speaker sensitivity:	97dB (±3dB)
Speaker rated power:	50mW
Active noise cancelling:	Yes, up to 25dB
Microphone	Yes
Control functions:	Call answer/end, Music play/pause, Volume
	up/down, ANC ON/OFF
Features:	Music/Gaming mode switch, Voice assistance, iOS
	and Android battery state monitor
Charge connector:	USB-C (5V/1A)
	400mAh, Lithium Ion
Playback time:	Up to 50 hours ANC OFF, up to 36 hours ANC ON
Standby time:	Up to 20 days
Charge time:	Approx 2 hours
	Tellur Shade ANC
•	Grey, Blue, Green, Beige
	220mm x 188mm x 50mm
Headset weight:	274.3g
Package includes:	1 x Shade Bluetooth Over-ear Headphones,
	1 x USB to USB-C cable,
	1 x Audio cable,
	1 x User Manual

1. Switching on/off



ON - Press the MFB key (2) for approx. 3 seconds.
OFF - To switch off, press the MFB key (2) for approx. 5 seconds.

2. Bluetooth pairing

Note - Pairing

- Make sure that your Bluetooth capable device is switched on and that Bluetooth is activated.
- For more information, please refer to the operating instructions of your device.
- The headphones and the device should not be more than 1 m apart.

Press the MFB key (2) for approx. 3 seconds until the LED flashes blue and red, entering the pairing mode.

Turn on the Bluetooth device searching mode. Open the Bluetooth settings on your device and wait until the list of found Bluetooth devices shows Tellur Shade ANC. Select Tellur Shade ANC and wait until the headphones are shown as connected in your device's Bluetooth settings.


Disconnecting the Bluetooth® connection

Disconnect the headphones via your device's Bluetooth® settings

Note - Automatic switch-off of the headphones

The headphones are equipped with an automatic switch-off mechanism. If there is no connection to your device within 5 minutes, they switch off automatically.

3. Controls

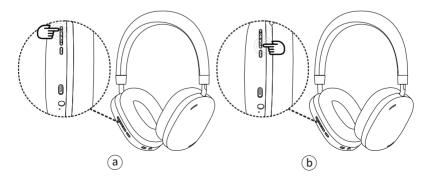

3.1 Audio playback




Note Please note that this function is only possible when a Bluetooth connection is active

- 1. Press the MBF key (2) once to pause or start audio playback.
- 2. Press and hold the " + " key for around 2 seconds to skip to the next track.
- 3. Press and hold the " " key for around 2 seconds to skip to the previous track.

3.2 Volume control

- 1. Press the " + " key once to increase the volume. Once the maximum volume is reached, the announcement, you will hear "beep beep".
- 2. Press the " " key once to reduce the volume . Once the minimum volume is reached, you will hear "beep beep".

3.3 Hands-free function

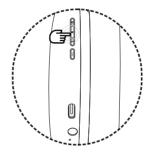

Make a call: Dial the number directly via your device to make a call.

Accept a call: Press the MFB key (2) to accept an incoming call.

Reject a call: Press and hold the MFB key (2) for around 2 seconds or use your device to reject an incoming call.

End a call: During the call, press the MFB key (2) once to end the call.

3.4 ANC mode


Press "ANC "key (c) to switch normal/ANC mode.

3.5 Audio playback via an audio cable

In addition to the connection via Bluetooth, you can also connect these headphones using the included AUX cable.

To do this, plug one end into the device and the other end into the audio input (d). When the audio cable is inserted, the Bluetooth connection is automatically disconnected. The headphones now function like cabled headphones.



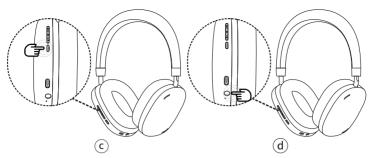

3.6 Music or gaming mode

When your headphones are playing music, double press the MFB key (2) to switch to music or game mode.

3.7 Voice assistant on/off

When your headphones play music/standby, triple press the MFB button to turn on the voice assistant and press the MFB key (2) again to cancel the voice assistant. (To use this feature, your mobile phone should support voice control).

4. Charging

Note

The headset contains a built-in lithium-ion rechargeable battery. Use the supplied USB Type-C cable to charge the headset before use.

- 4.1 Ensure that the headphones are switched off before charging them. Connect the USB charging cable included to the charging socket. Connect the free plug on the USB-C charging cable to a suitable USB charger. To do this, consult the operating instructions for the USB charger you are using.
- 4.2 The LED lights up solid red during the charging process. Once the charging process is complete, the LED goes out.

It can take up to 2 hours for the battery to be fully charged.

4.3 When the headphone battery capacity is low, the LED flashes red and the announcement "Battery Low" is heard.

Note

During the charging process, the Bluetooth® connection is automatically disconnected.

Safety instructions



- Use the product only for the intended purpose.
- Children should be supervised to ensure that they do not play with the product.
- Do not use the product in areas in which electronic products are not permitted.
- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.
- Do not open the device or continue to operate it if it becomes damaged.
- Do not bend or crush the cable.
- Do not drop the product and do not expose it to any major shocks.
- Dispose of packaging material immediately in accordance with the locally applicable regulations.
- Do not modify the product in any way. Doing so voids the warranty.
- Protect the product from dirt, moisture and overheating and use it in dry environments only.
- Do not use the product in the immediate vicinity of heaters, other heat sources or in direct sunlight.
- Only use the article under moderate climatic conditions.
- As with all electrical products, this device should be kept out of the reach of children.
- Do not operate the product outside the power limits specified in the technical data.
- Do not use the product in a damp environment and avoid splashing water
- While driving a car or using sports equipment, do not allow yourself to be distracted by your product
- and keep an eye on the traffic situation and your surroundings.
- The battery is permanently installed and cannot be removed; dispose of the product as a whole in accordance with the statutory regulations.
- Do not incinerate the battery or the product.
- Do not tamper with or damage/heat/disassemble the batteries/rechargeable batteries.
- Do not use the product during the charging process!

Warning – rechargeable battery

- Only use suitable charging devices or USB connections to charge the product.
- Do not use defective chargers or USB ports and do not attempt to repair them.

• Do not overcharge the product or allow the battery to completely discharge.



- Avoid storing, charging and using in extreme temperatures and at extremely low atmospheric pressures (such as at high altitudes).
- Charge regularly (at least quarterly) during periods of prolonged storage.

Warning - magnets

- This product generates magnetic fields. Persons with a cardiac pacemaker should consult a doctor before using this product, as the pacemaker's proper function could be affected.
- Do not store bank or similar cards with magnetic strips near the charging box or earphones. The data on the cards could be damaged or completely deleted

Warning - high volume

- High sound pressure!
- There is a risk of hearing damage.
- To prevent any loss of hearing, avoid listening at loud volumes for prolonged periods.
- Always keep the volume at a sensible level. Loud volumes, even over short periods, can cause hearing loss.
- Using this product limits your perception of ambient noise. For this reason, do not operate any vehicles or machines while using this product

Disposal and recycling information

The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electronic products and batteries must be taken to separate waste collection points at the end of their working lives; they must not be disposed of in the normal waste stream with household garbage. It is the responsibility of the user to dispose of the equipment using a designated collection point or service for separate recycling of waste electrical and electronic equipment (WEEE) and batteries according to local laws. Proper collection and recycling of your equipment helps ensure EEE waste is recycled in a manner that conserves valuable materials and protects human health and the environment, improper handling, accidental breakage, damage, and/or improper recycling at the end of its life may be harmful for health and environment.

For other langauges please scan th QR code
Pentru manuale in alte limbi vă rugăm să scanați codul QR
Para otros idiomas, escanee el código QR
Pour les autres langages, veuillez scanner le code QR
Für andere Sprachen scannen Sie bitte den QR-Code
Per altre lingue, eseguire la scansione del codice QR



www.manuals.tellur.com



ABN Systems International

- Str. Marinarilor, nr.29
 Sector 1, Bucuresti, Romania
- 004.021.233.09.95
- office@tellur.com
- www.tellur.com